

# Model: MSD-480-02A

## ≤1%RH, max. 60°C, 308L





## Digital control panel

MSD-480-02A has an outstanding performance for drying moisture sensitive components and PCBs as a result of a high performance drying unit and a heater. It is specially designed for moisture sensitive SMD packages to comply with IPC/JEDEC J-STD-033D.

Totech (Toyo Living) is the creator of world's first Automatic Drying System invented in 1973.

Super Dry cabinets use the highly-quality and highly reliable Toyo Living engine and has been sold over 700,000 units and used in over 10,000 companies around the world. We also supply various kinds of custom-build cabinet to best suit our client's need.

#### Features

- \* Advanced ultra-low humidity technology, effective thermal insulation to make the energy consumption the lowest.
- Humidity control: min. ≤1%RH
- ❖ Temperature control: max. 60°C.
- \* ESD safe design: Cabinet is with ESD metal painted steel body, stainless steel shelves and ground wire, well comply with IEC 61340-5-1.
- \* Convenient Operation: Totech MSD cabinet is with digital control panel, can control the humidity precisely by adjusting  $\pm 0.1\%$ RH, and temperature from room temperature to 60° C. Humidity, temperature and alarm functions are shown and can be adjusted by digital control panel. Key Lock function on the digital control panel prevents unintended changes of setting. Sensor calibration function is also available with digital panel.
- \* Maintenance free design: Totech dry cabinet works by dry units. An interlocked fan causes the air to circulate through the dry unit, while passing through the dry unit moisture in the air is absorbed by the zeolite desiccant. During periodic regenerating of the zeolite desiccant by heating, the absorbed humidity is evaporated and exhausted through the external shutters of the dry unit. The process is physical, and no extra maintenance at all.
- ❖ Lockable doors: Every door can be locked separately with a key.
- Alarm setting (Option): Humidity/door open alarm buzzer and humidity alarm light tower.

## **Applications**

Totech MSD series maintains preset internal humidity levels from ≤1%RH and temperature from room temperature to 60° C and is ideal to reset floor life fast without causing damage to components, and it can also be used for long term storage cabinet.

## **Specifications**

Humidity control	≤1%RH
Temperature control	Max 60°C
Sensor precision	$\pm 2\%$ RH, $\pm 1^{\circ}$ C
External dimensions	(W x H x D) 600 x 1262 x 764 mm
Internal dimensions	(W x H x D) 500 x 970 x 550 mm
Weight	126 kg
Capacity	266 L
Shelves	3 pcs, adjustable
Loading capacity	100 kg/shelf
Structure	Double layer steel body with isolation
Cabinet color	Gray
Door	2 pcs, with handles, airtight magnetic sealers and tempered glass window
ESD grounding wire	1Μ Ω
Voltage	AC220 V, 50/60Hz
Castors	4pcs
Set and display	Digital panel









# Model: MSD-480-02A


# ≤1%RH, max.60 °C, 308L

# Drawing for MSD-480-02A

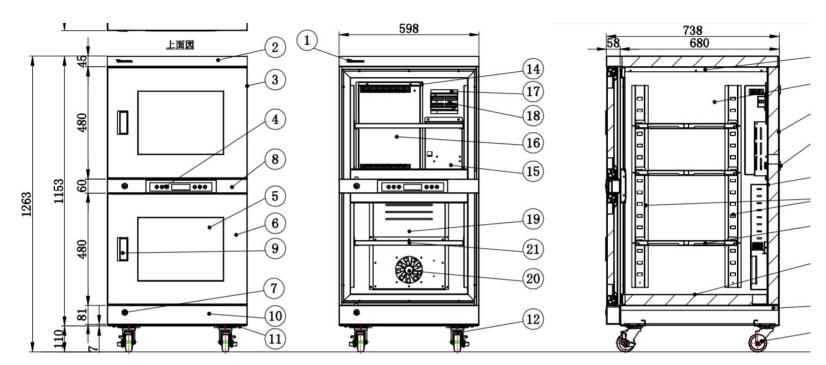

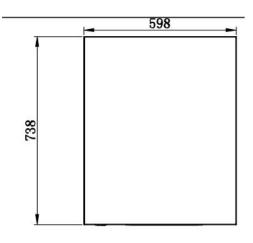

# Unloaded test

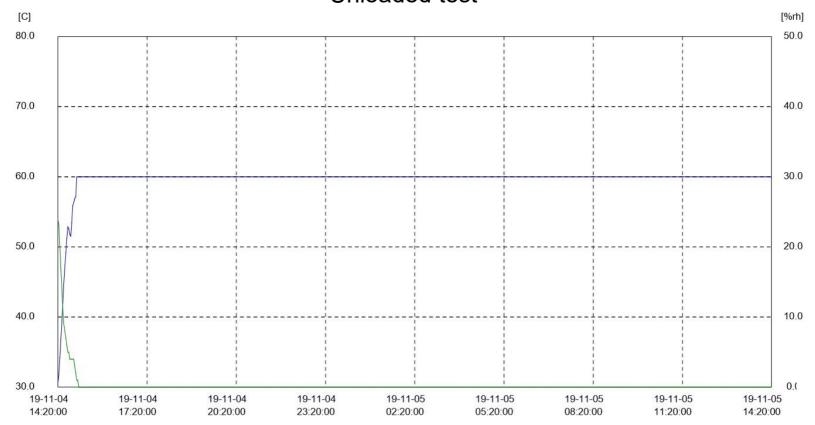

Set at 60°C+1%RH









# Model: MSD-480-02A

## ≤1%RH, max.60 °C, 308L

### **Digital Control Panel**

- Set humidity value precisely, display humidity and temperature value
- Set the humidity and door open alarm
- Set the nitrogen purging time
- Lock the panel to avoid unintended changes of setting
- Sensor calibration
- Set and display inner temperature



◆Extra shelf

Greatly increase the usable space inside Super Dry



♦SMD single rack (stainless steel)

Suitable for storage of components on tape and reel, can pull out on rail



❖SMD double rack (stainless steel)

Suitable for storage of components on tape and reel, can pull out on rail



❖Humidity/ Door open alarm buzzer

Alarm buzzer sounds when its internal humidity/ door open time exceeds set value



❖Humidity alarm light

Alarm light flashes and sounds when its internal humidity exceeds set value



❖Independent Nitrogen purge system (Model TN2-02)

❖Nitrogen valve

(Model: HN2-01)

Simple N<sub>2</sub> flow meter

0-25L/min adjustable

❖Nitrogen auto purge system (Model AN2-03)




❖Adjustable legs



❖Wrist strap connection

Effective usage of N<sub>2</sub> combined with Super Dry, help to accelerate the recovery time and oxidation prevention. Set the buttons

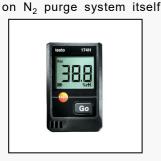

❖Data logger with software (model 174H)

Data logging humidity and temperature, can read and output data by software with a PC

Effective usage of  $N_2$ combined with Super Dry, help to accelerate the recovery time and oxidation prevention. Set on digital control panel Available for effective stabilization

Allows grounding while handling ESD sensitive materials



